

Modbus TCP communication with residential inverters through SDongle FE.



Huawei Technologies Co. Ltd.

Version	Created by	Date	Remarks
01	Huawei a84151885	02.12.2021	Initial version

The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are a number of factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. Huawei may change the information at any time without notice.

This document describe how establish the MODBUS TCP communication with residential inverters trough the SmartDongle FE.

0. In order to be able to communicate with the SDongle through the MODBUS TCP the SDongle firmware should be V100R001C00SPC123 or later.
Please contact eu_inverter_support@huawei.com for the upgrade package and for the upgrading instructions.

The Fusion Solar app version should be 5.7.059 or later.


The latest version of the app can be downloaded from the bellow address:


<https://intl.fusionsolar.huawei.com/pvmswebsite/nologin/assets/build/index.html#/jumppage>

Phone requirements: operating system Android 4.0 or later, the mobile phone should support the Wi-Fi function.


1. Check the inverter IP address.

Open FusionSolar app > Me > Device commissioning > disable mobile data > Connect > Scan the inverter QR code > login under the Installer profile > the default password is "00000a". Go to settings > Communication configuration > Router connection settings

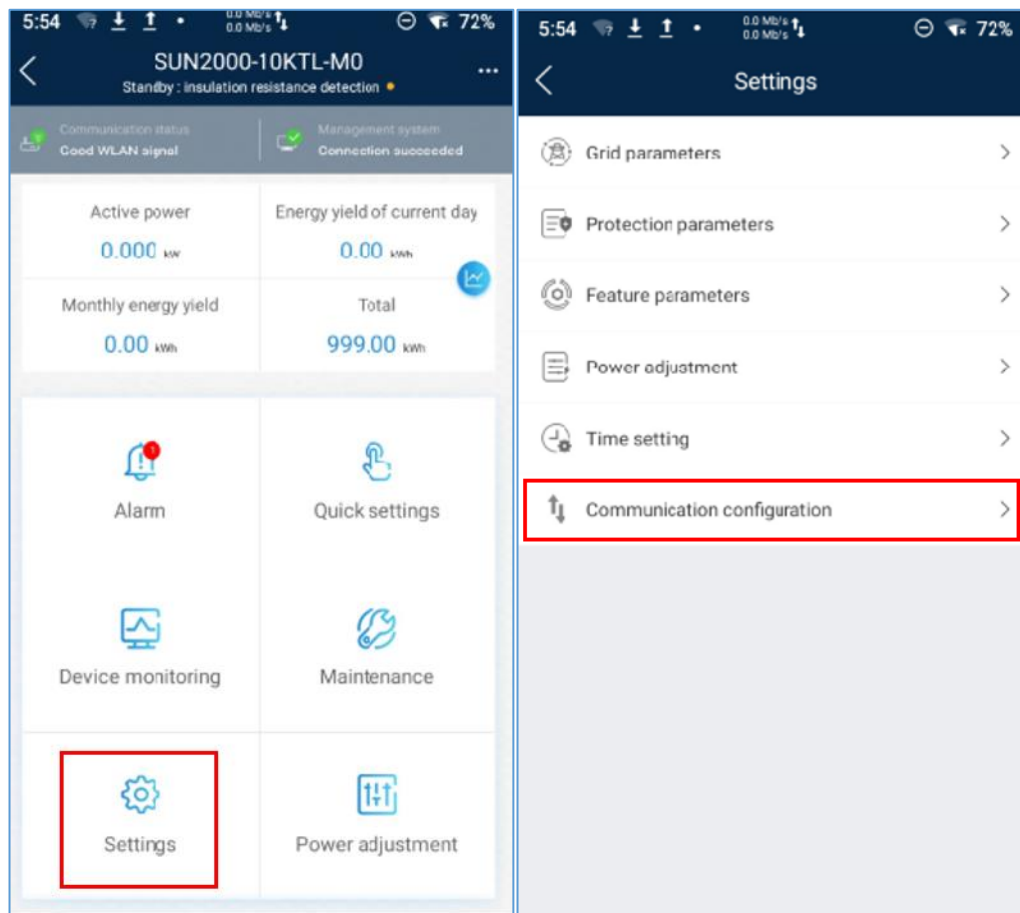

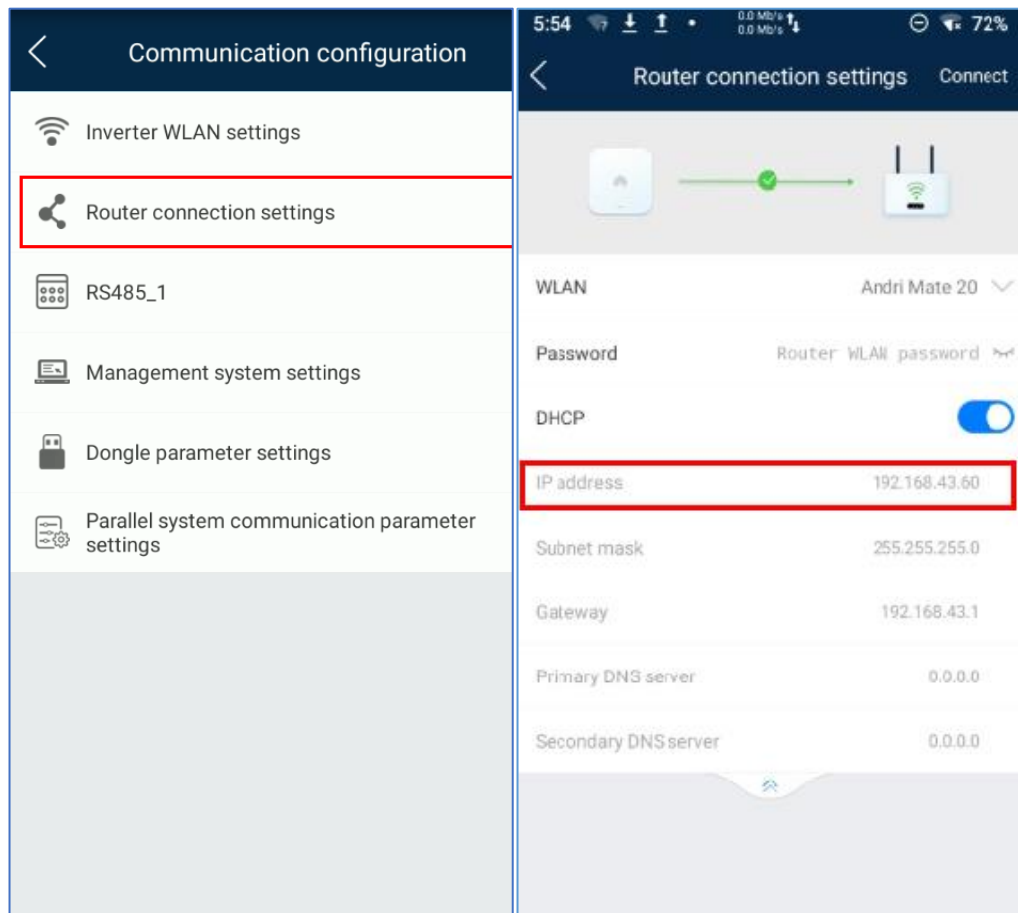

2. Enable the SDongle MODBUS communication (if available)
Settings > Communication configuration > Dongle parameter settings > Modbus-TCP > Set to unlimited, or limited and write the IP address of the PC or master device.

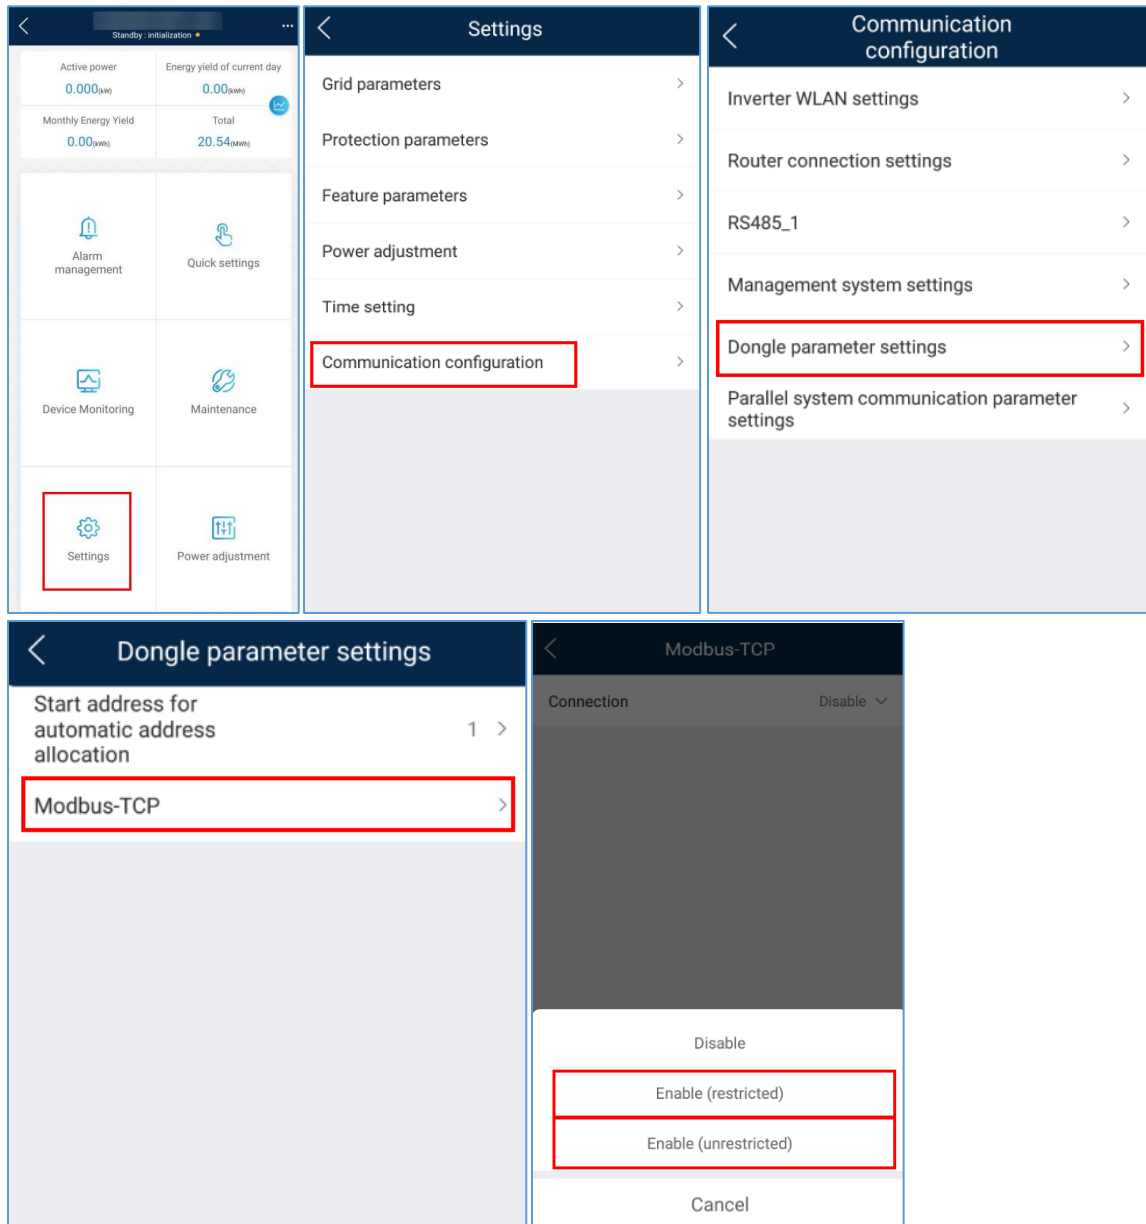

!!!! Note

Restriction can also be configured in Fusion Solar.

Details | Alarms | Configuration

Device Information

Managed Object Name:

Software Version:

Commissioned By:

Device IP address:

Channel Type:

Connection parameters

PV management system server:

TCP heartbeat period (s):
 [0~65535]

Device model:

Modbus ID address:

Authentication Password:
 [Change Password](#)

Device replacement record:

Type:

PV management system server port 1:
 [0~65535]

Connection:

Protocol version:

SN:

Device port:


Parent Object:

SSL encryption:


Note: If connection to the NMS server fails after connection parameters are successfully modified, the NMS server address, NMS server port, and SSL encryption parameters of the device will be automatically restored to the previous settings after 5 minutes.

3. In order to test the communication, we will use the ModbusPoll64 app.

Open ne ModbusPoll app > Connection > Connect > Set the “inverter IP” and 502 port (the inverter and PC should be in the same network)

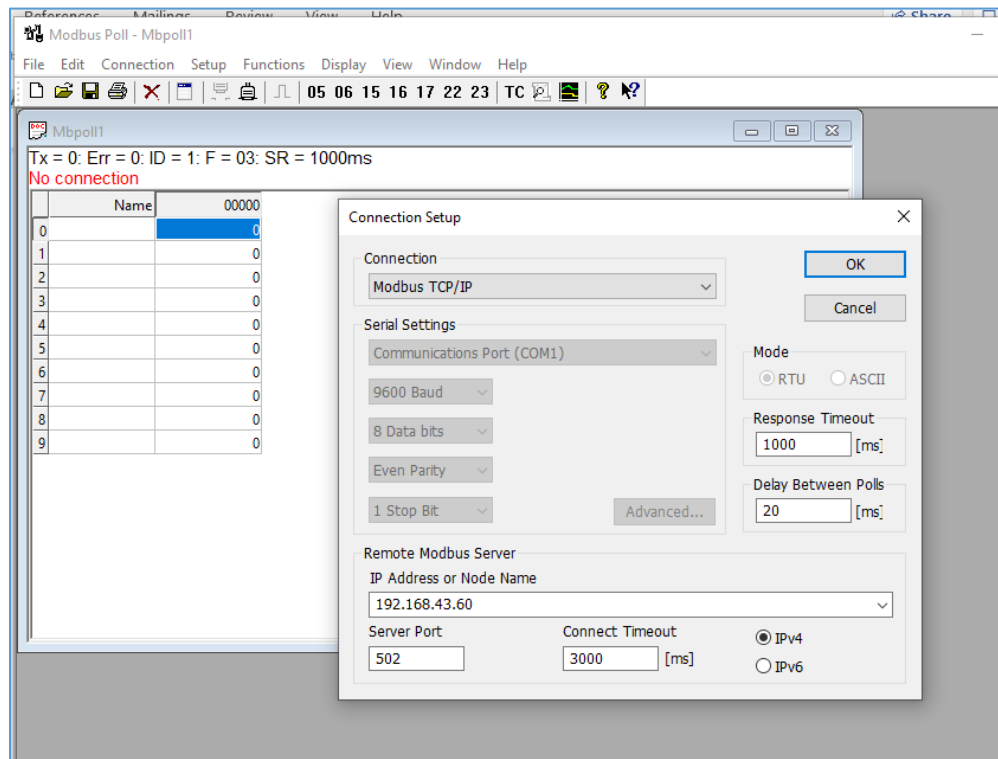


4. Check the inverter RS485 address Settings > Comm param > RS485_1

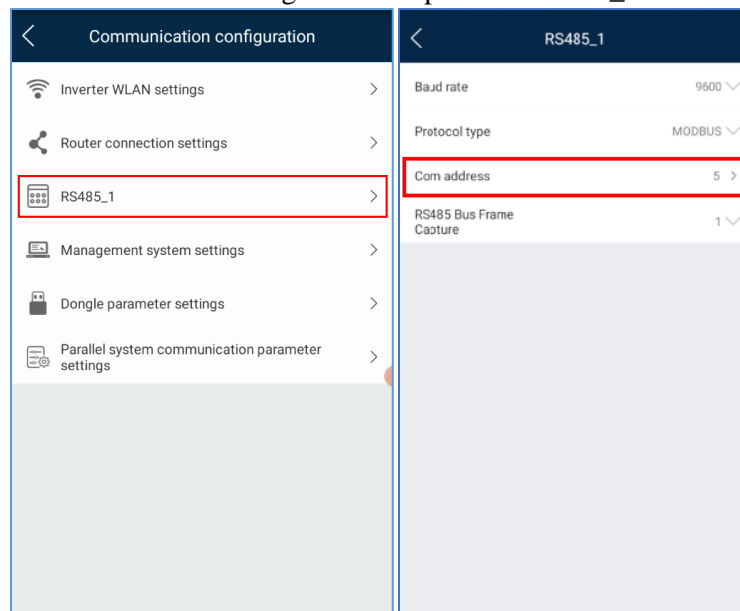

- For example we will use the register 32016 that store the PV1 voltage for the SUN2000 10KTL-M0 inverter, the data type is Signed integer (16 bits), quantity 1.

No.	Signal Name	Read/Write	Type	Unit	Gain	Address	Quantity
18	PV1 voltage	RO	I16	V	10	32016	1
19	PV1 current	RO	I16	A	100	32017	1
20	PV2 voltage	RO	I16	V	10	32018	1
21	PV2 current	RO	I16	A	100	32019	1
22	PV3 voltage	RO	I16	V	10	32020	1
23	PV3 current	RO	I16	A	100	32021	1
24	PV4 voltage	RO	I16	V	10	32022	1
25	PV4 current	RO	I16	A	100	32023	1


Go to Setup > Read/Write definitions > Set the inverter address (Slave ID), register address and quantity.

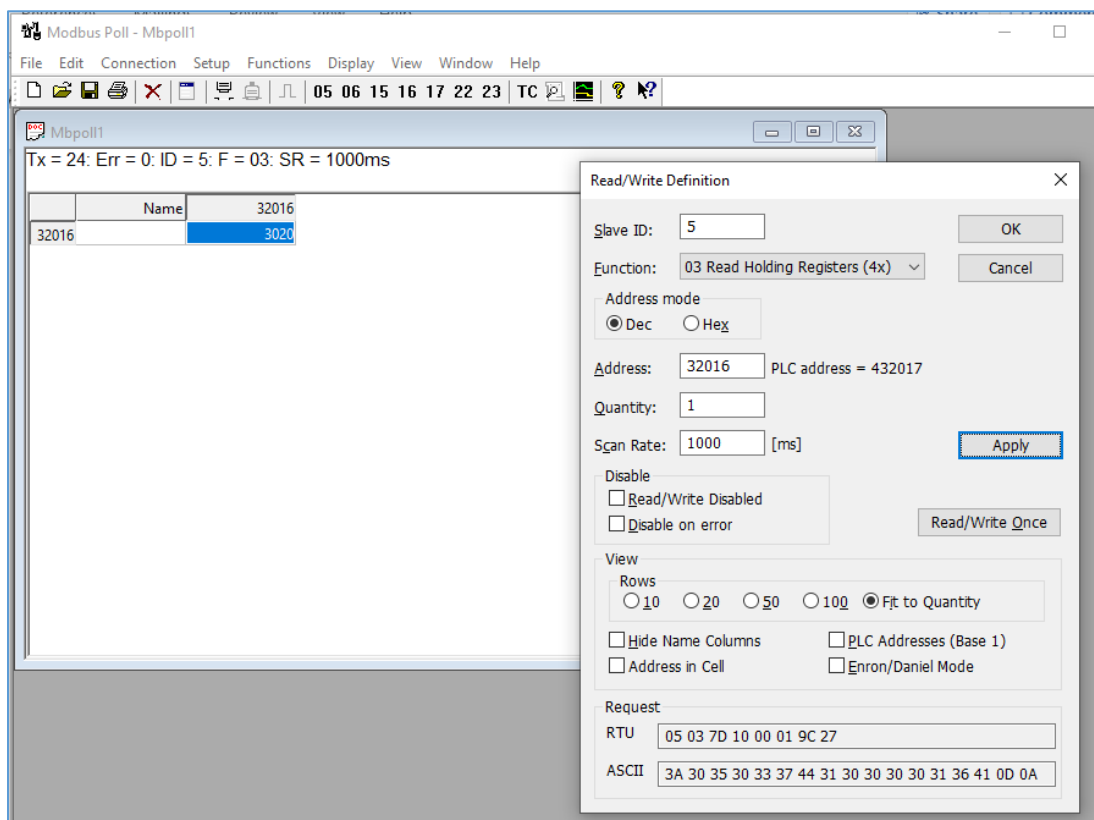

3020 0 = 302V

If the data is displayed wrong, please go to display and set the data type to Signed integer

6. To read the Active power from the power meter, we need to use the register 37113 data type Signed integer > Big endian

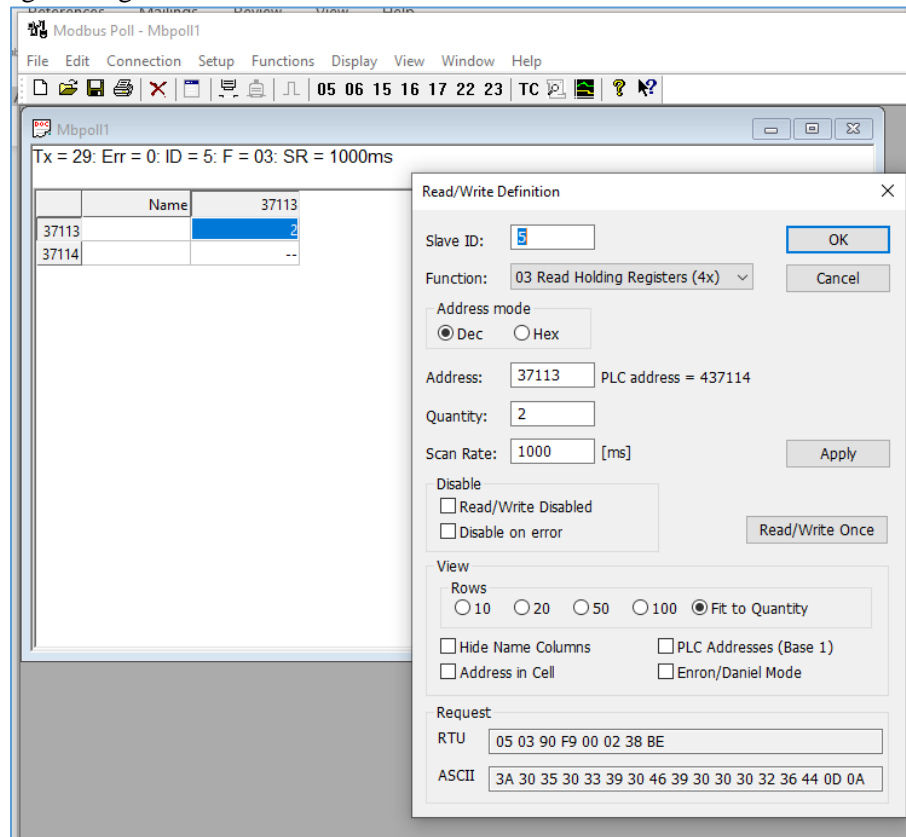

In order to obtain the Modbus Interface Definitions please contact the eu_inverter_support@huawei.com.

Thank you.