

Qmotion integration

For this integration the NXT server should be upgraded to alpha version 3.40-6. Go to Global settings and change the Firmware to 'alpha'. Then proceed to the modules page and start a new download of the firmware. Once the download is finished, you can install the latest alpha version.

This page describes how to integrate Qmotion shades that are installed through wired RS485 with a Dobiss NXT installation.

Moxa gateway

Model: Nport 5150

<https://www.moxa.com/en/products/industrial-edge-connectivity/serial-device-servers/general-device-servers/nport-5100-series/nport-5150>

Network settings

- Set the gateway on a fixed IP address

The Dobiss NXT server and the Moxa gateway need to be installed on the same local network.

MOXA www.moxa.com

- Main Menu
 - Overview
 - Basic Settings
 - Network Settings
 - Serial Settings
 - Operating Settings
 - Accessible IP Settings
 - Auto Warning Settings
 - Monitor
 - Change Password
 - Load Factory Default
 - Save/Restart

Network Settings

IP address	10.10.1.76
Netmask	255.255.255.0
Gateway	10.10.1.254
IP configuration	Static
DNS server 1	10.10.2.101
DNS server 2	10.10.1.254

SNMP Setting

SNMP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Community name (max: 31 characters)
Contact	
Location	

IP Address report

Auto report to IP	
Auto report to UDP port	4002
Auto report period	10 seconds

Submit

Serial settings

MOXA www.moxa.com

- Main Menu
 - Overview
 - Basic Settings
 - Network Settings
 - Serial Settings
 - Port 1
 - Operating Settings
 - Accessible IP Settings
 - Auto Warning Settings
 - Monitor
 - Change Password
 - Load Factory Default
 - Save/Restart

Serial Settings

Port 01

Port alias	
------------	--

Serial Parameters

Baud rate	115200
Data bits	8
Stop bits	1
Parity	None
Flow control	None
FIFO	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Interface	RS-485 2-Wire

Operation settings

MOXA www.moxa.com

Operating Settings

Port 01

Operation mode: TCP Server Mode

TCP alive check time: 7 (0 - 99 min)

Inactivity time: 0 (0 - 65535 ms)

Max connection: 1

Ignore jammed IP: ☒ No ☐ Yes

Allow driver control: ☒ No ☐ Yes

Data Packing

Packing length: 0 (0 - 1024)

Delimiter 1: 0 (Hex) ☐ Enable

Delimiter 2: 0 (Hex) ☐ Enable

Delimiter process: Do Nothing (Processed only when Packing length is 0)

Force transmit: 0 (0 - 65535 ms)

TCP Server Mode

Local TCP port: 4001

Command port: 966

Submit

Qmotion

Collect the shade identifiers by scanning the QR code on the devices. The ID starts with 000D

Dobiss integration

1. Go to Configuration > Partners > Wireless > Qmotion
2. Fill out the IP address
3. Add a shade or group via the + button
4. Give the shade a name, fill in the ID (000D... or a number for a group) and choose the type (shade or group)

Configuratie qmotion

qmotion_config


qmotion_ip: 10.10.1.76

+ qmotion_shades_groups


Name	ID	Type
Qmotion demo	000D6F000B7C6C46	qmotion_shade

5.

Once all shades and groups are added, go to the Out/In page of the configuration to order them into groups. You will find your shades and groups in the list of 'Zigbee outputs':

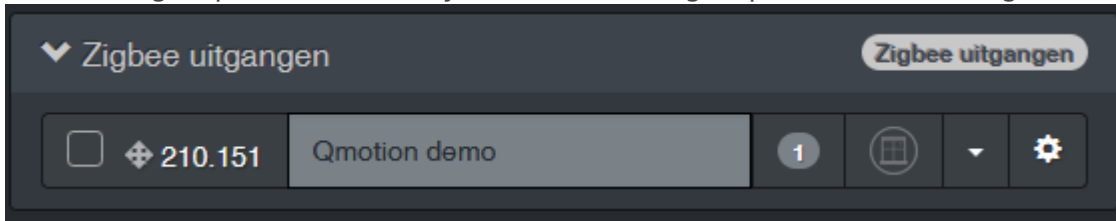

6. If you add the shade/group to a Dobiss group, it will be visible in the Touch UI:

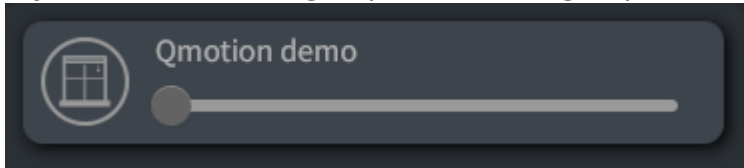

7. When the shade is controlled manually, from a group or by another remote; the status will be updated in Dobiss after a few seconds.

The status polling is done for the moment for each shade individually, but polling of group 0 might speed up this process.

Revision #4

Created Wed, Jul 19, 2023 6:48 AM by Koen Van Isterdael

Updated Wed, Jul 19, 2023 7:10 AM by Koen Van Isterdael